

6 Inch coaxial ceiling speaker



CT-ETWF3008-YD

Introduction

Background music system consists of an intelligent amplifier CT-ETWF3015-YD, capacitive touch controller CT-ETWF3014-YD, and 6-inch coaxial ceiling speaker CT-ETWF3008-YD composition. Sound source signals can be extended at home in every room, a kitchen, living room, balcony and every corner. You can find it at each room can listen to beautiful music, where , hearing which, when watering the flowers on the balcony, you can enjoy music, restaurant, shower in the bathroom, reading books in the library, you can have beautiful and exquisite background music to accompany, so you spend every moment enjoyable. Background music system, with its unique design, fully meet the demand in the home life of music, its intelligent high-tech design, makes the whole system more humane, it is more convenient to use flexible, controlled way.

Specifications

- Name: 6-inch coaxial ceiling speaker
- La speaker: 6.5" black P.P plastic drum tape sea side
- Frequency response: 69Hz-20kHz
- Drag resistance: 8 ω
- Power rate: 15W
- Sensitivity: 87dB
- NET: metal mesh

- Dimension : 240mm x 84mm

Installation Instructions

1. Choose the installation location


- 1) The thickness of the mounting surface in the 9-30MM between the clearance behind the mounting surface, at least in 146MM, make sure there are no other objects hit the Horn back

2. Preparing speakers

- 1) If you want to frame and top mesh painting, painting, connect speaker wire and install a speaker after
- 2) To take away the net, with mesh will be the open mesh or push frame until the edge of the network before and after show, and then you can pull it off
- 3) Frame when painted, take off the screen and insert a dust sheet to prevent paint spillage on the Horn

3. Connect Speaker Wire

- 1) Connect Speaker Wire
- 2) Each wire end to leave a 102MM speaker cable
- 3) Each speaker wire set aside about 6MM insulating part
- 4) Screw insulating parts
- 5) By pressing the elastic film will be a made a mark on the wires connected to the red terminal and wire into the hole, and release the clip to repeat this action connect the unmarked wire to the black terminal on
- 6) To connect the red terminal on the red terminal of the amplifier (+), black terminal connection to the power amplifier (-)

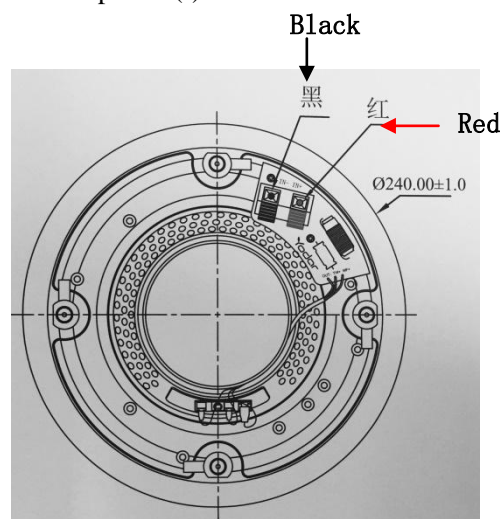

Safety Notice

- Before installation , Verify the actual voltage meets the specifications for equipment, the device will be powered off, ensuring the safety of personnel and equipment;
- This product is not suitable for installation in environments where leakage or spill water;
- This product should not be installed in an environment of excessive dust;
- In order to ensure the sound, need to periodically use a soft brush to clean the loudspeaker